


DIAGRAM FOR S 130 FM / S 130 FM BT, DOORPHONE AND TELEPHONE INTERFACE

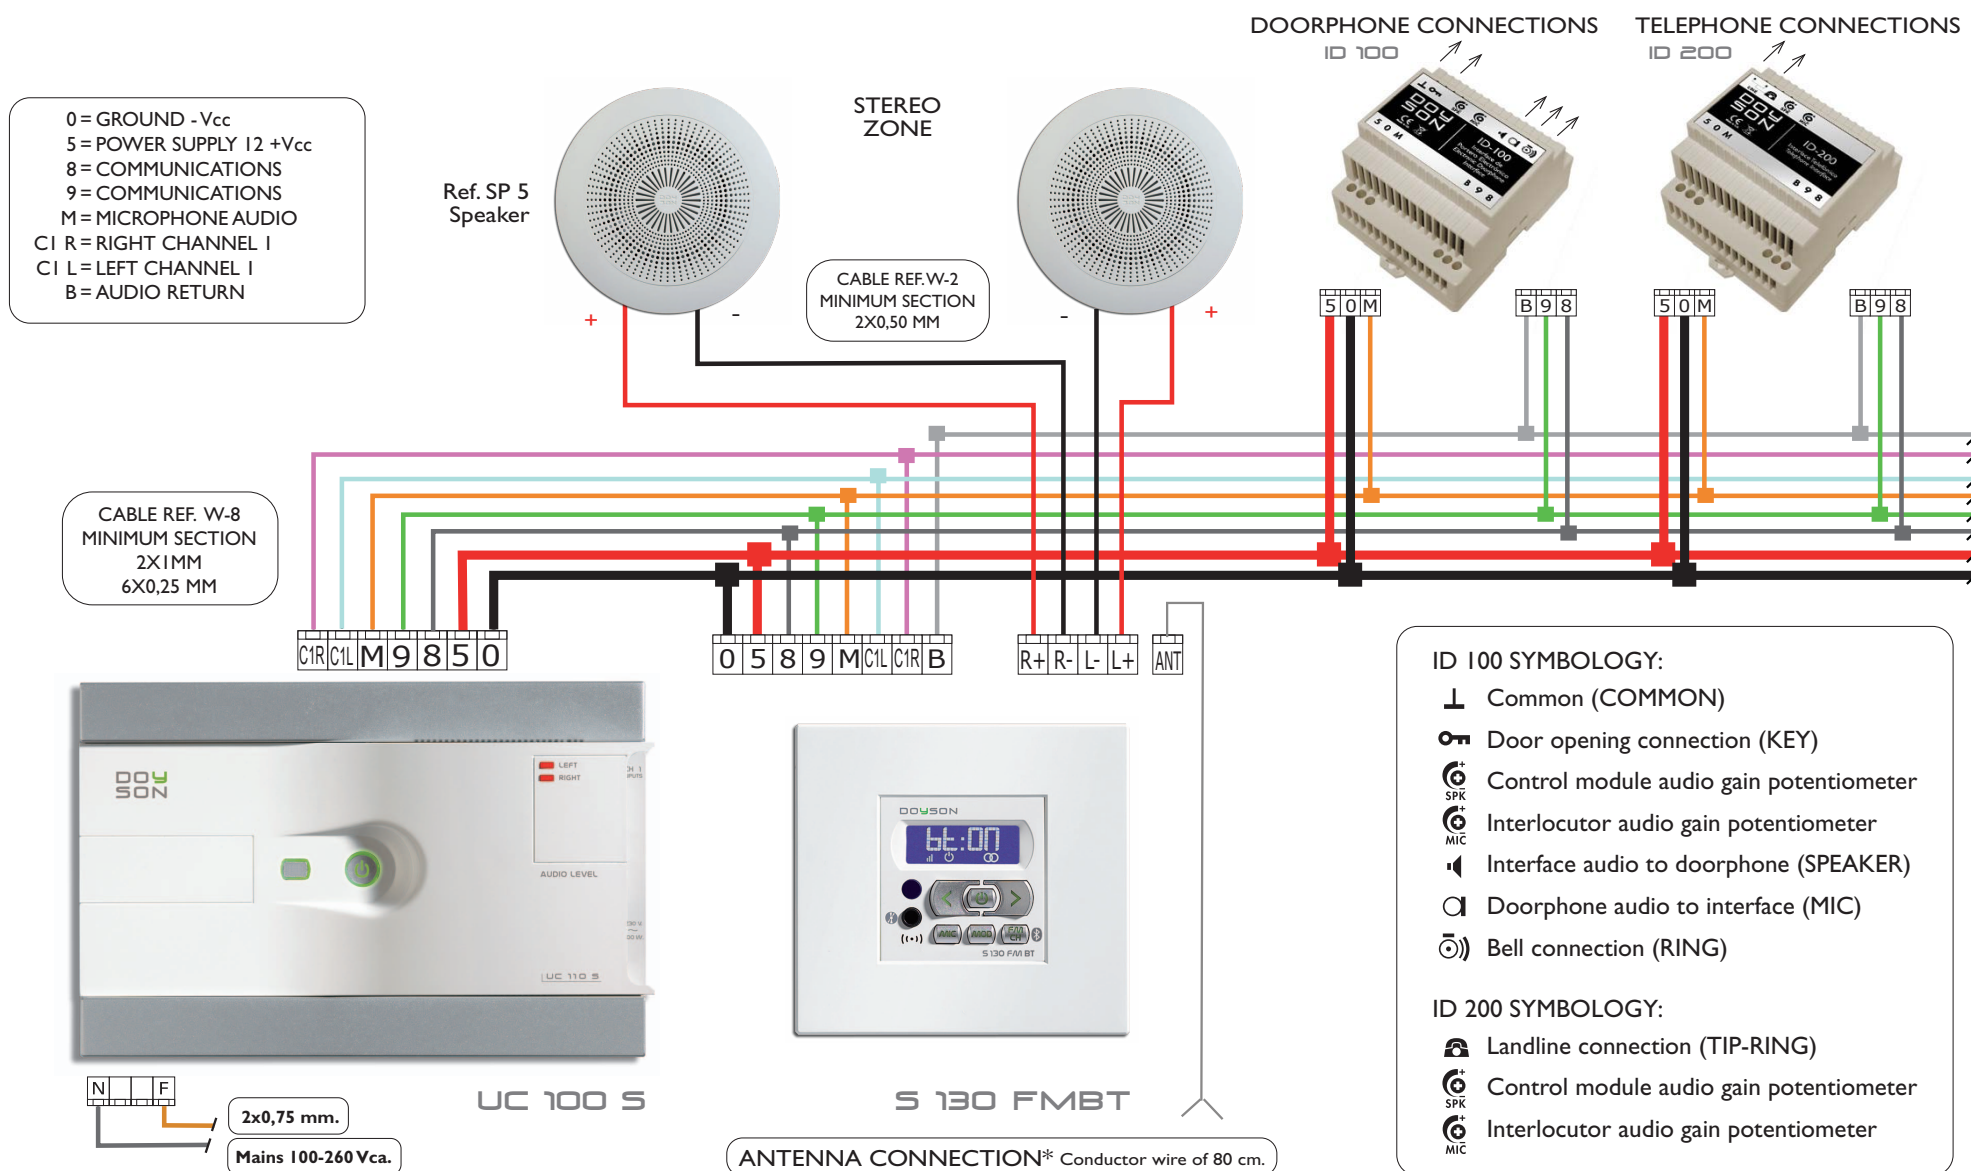

Note: "B" only must be connected when ID100 and ID200 interfaces are present on the system. *In zones of bad reception, connection to outdoor antenna it is highly recommended.